

## **PXF Lighting** 73 Jutrzenki Street 02-230 Warsaw, Poland

**2** +48 22 33 44 000, **3** +48 22 33 44 033









Installation manual







## 230V/50HZ TC-D, T-R, LED

#### 1. Dimensions

Power [W]	Weight
1x60/18/26/36	1,15kg
2x20	1,25kg
2x9/18	1,15kg

# 2. Assembly

- a) carefully take the luminaire out of box and put it on a stable surface (table, floor)
- b) open the luminaire by pushing two neighbor locks of diffuser
- c) connection of power supply
  - push the gland into the hole in the base of a luminaire
  - pull the feeding cable through the gland
  - connect the wires as shown on a cube
- d) surface installation:
  - luminaire is installed to the wall on four holes 4,5mm diameter each
- e) light source installation:
  - slip a lamp of proper power into the luminaire and push in gently in the socket
- f) lock the diffusor on a fixture

## 3. Important warnings:

Do not install the luminaires in areas without an exchange of air.

The manufacturer cannot be considered liable for any damages deriving from improper, wrong and unreasonable use of the fitting.

Luminaries may be installed by qualified personnel only.

Any manipulation inside the luminaire when power supply is on causes the risk of electric shock.

Manufacturer is not responsible for any flaws caused by avoid using this manual.

Manufacturer reserves a right to change the construction of the product.













