 
 


Assembly instruction

Finestra

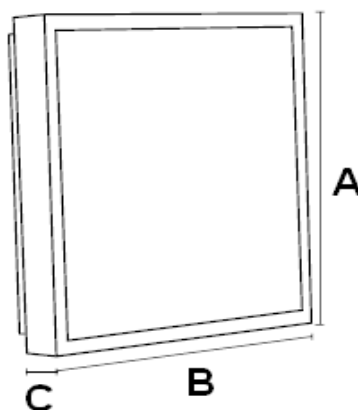

230V/50HZ



1. Dimensions and weight

Moc	A	B	C	Waga
LED 11W/1x22W	307	307	68	3kg
1x22W INOX	337	337	65	3,4kg
LED 11W INOX	337	337	65	2,1kg
2x18W	307	307	68	3,2kg
2x18W INOX	337	337	65	3,6kg
1x32W	407	407	65	3,6kg
LED 24W/2x24W	407	407	65	3,8kg
1x40/55W INOX	437	437	65	4kg
2x24/3x24W INOX	437	437	65	4,2kg
LED 24W INOX	437	437	65	3,8kg
4x14/24W 620x620	620	620	70	5,6kg
4x14/24W 715x715	715	715	70	6kg
2x36W	1314	374	76	4kg
2x9W	307	307	68	3,2kg



2. Assembly

  - take out carefully fixture from packaging and put in safety place (table or floor)
- fasten screws off (besides of INOX) to take cover of fixture off
- take frame with sheet/plate
- place expand pegs according to holes in base of fixture (wall/ ceiling mounting)
- screw four regulation lines in hole of ceiling assembly (for wires/chain fixture)
- power connection
 - put power cable through the hole in base of frame
 - connect cables according to signs at power cube

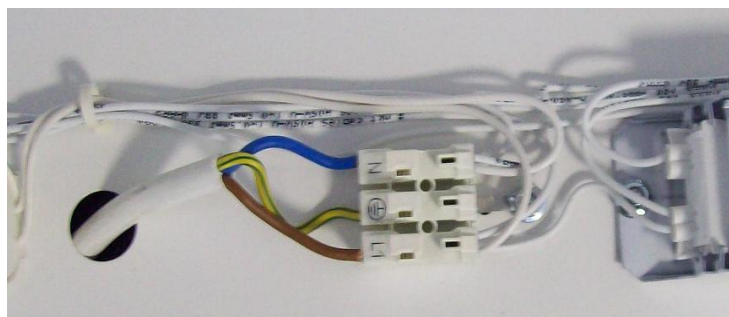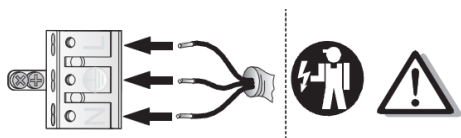

g) wall/ceiling and wires/chain mounting

- wall/ceiling mounting: fixture assembly to ceiling or wall with four holes of 7mm diameter, label at side of base show direction of suspension (wall mounting INOX)

Moc	A	B	C	D	E	F
1x22W (INOX) rys a)	276	198	276	198	105	40
2x18 rys a)	276	198	276	198	105	40
LED 11W (INOX) rys b)	276	225	276	225	114	20
1x32W rys a)	376	297	379	297	155	38
1x40/55W (INOX) rys b)	376	275	376	275	188	38
2x/3x24W rys b)	376	275	376	275	188	38
LED 24W(INOX) rys a)	376	297	376	297	142	22
4x14/24W, 715x715 rys b)	680	478	680	478	340	18
4x14/24W, 620x620 rys b)	645	400	645	400	322	77
2x36W rys b)	342	270	1280	1020	35	454
2x9W rys b)	276	198	276	198	105	40

- wall/chain mounting:

drill the mounting holes for 8mm diameter,
screw suspension universal to ceiling, screw tightly outside nut of regulation in the mounting hole,
place the line until the moment you reach needed lengths
and screw nut on again.

Placing the line deeply it makes fixture up.

If you need to make fixture down screw nut of regulation off
and put in fixture – line will go down.

h) fluorescent lamp mounting:

- lamps of correct power put to the fixture

i) put (INOX) and screw cover of fixture again

3. Important warnings:

 
 
 
- the manufacturer cannot be considered liable for any damages deriving from improper, wrong and unreasonable use of the fitting.

- luminaries may be installed by qualified personnel only.

- any manipulation inside the luminar when power supply is on causes the risk of electric shock.

- manufacturer is not responsible for any flaws caused by avoid using this manual.

- manufacturer reserves a right to change the construction of the product.

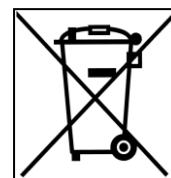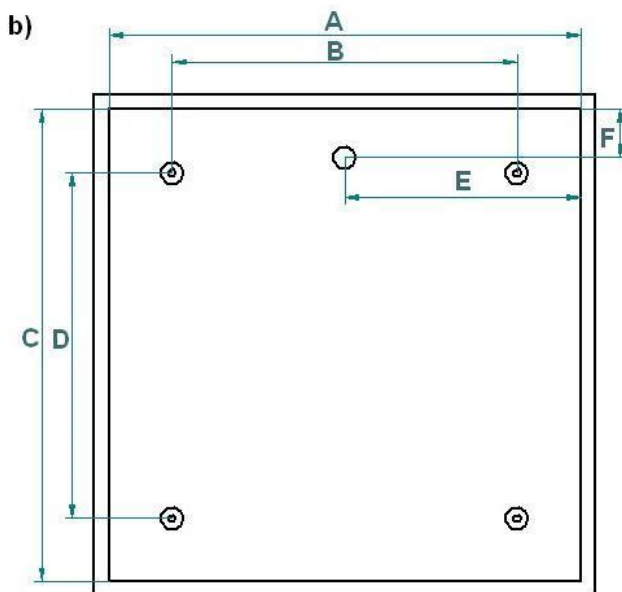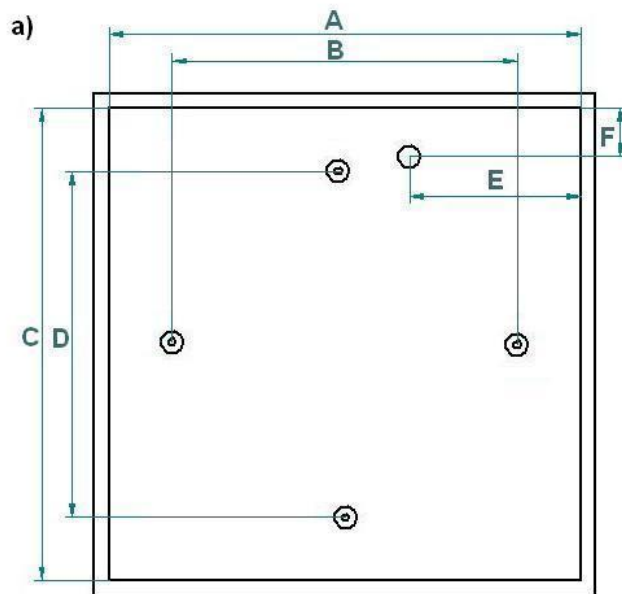

The European Directive 2002/96/EC on waste electrical and electronic equipment, requires that electric and electronic devices must be disposed of in the normal household waste. The crossed out wheeled bin is reproduced in order to remember obligations towards separately collection. For correct disposal, please use authorized waste disposal facilities or returned to the distributor at the date a new lighting fitting is purchased. Lamps, if disposed together with the lighting fitting, shall not be broken up since they contain substances which are highly polluting for the environment. Unauthorized disposal of the foregoing waste material is punishable by law. More details of directive available at: <http://www.gios.gov.pl>