TRIDONIC

basicDIM DGC

Compact control module

Product description

- Compact dimensions for luminaire installation
- For up to 20 DSI or DALI devices (max. 10 per output channel)
- DALI IN input
- 2 DALI/DSI output channels with adjustable offset from channel 2 to channel 1
- 1 relais output
- Sensor input for up to 4 basicDIM DGC sensors 5DPI 14
- 2 switch inputs for on/off switching and dimming
- Individual adjustment of the parameters with basicDIM DGC Programmer or software masterCONFIGURATOR
- 5-year guarantee



Wiring diagrams and installation examples, page 9



TRIDONIC



Storage temperature

Max. casing temperature to

Type of protection

basicDIM DGC


Compact control module

Technical data Rated supply voltage 220 – 240 V Mains frequency 50 / 60 Hz Power 2.5 W Stand-by power 0.5 W Current draw, input (DALI bus) 2 mA Operating temperature 0 ... +60 °C

-25 ... +70 °C

IP20

70 °C

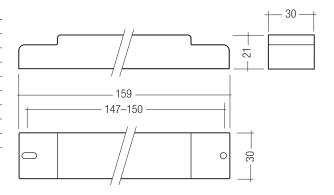

Ordering data

Туре	Article number	Mounting	Packaging carton
basicDIM DGC	28000920	Luminaire installation	10 pc(s).

Specific technical data

Туре	Inputs		Outputs		CI	CH2 as Link Line		Output, relay (L')						
	Dimming	Max. cable	Max. basicDIM	Max. sensor	Digital control	Control output	Dimming	Maximum	Voltage DC	Maximum	Number of	Max. switching	Maximum	Max.
	switch	length at	DGC sensors	line length at	line DALI/DSI	per physical	range	cable length		cable length	combinable	output (e.g.	apparent	switching
		1.5 mm ²		$0.2 - 1.5 \text{ mm}^2$		output (devices)		at 1.5 mm ²		at 1.5 mm ²	modules	LCAI)	power	output
basicDIM DGC	double	100 m	4	10 m	2	10	1 – 100 %	100 m	13 V	100 m	10	2	200 VA	500 W

ores-

basicDIM DGC Sensor 5DPI 14f

Product description


- Light measurement and motion detection
- Up to 4 basicDIM DGC sensors on one basicDIM DGC
- Can be remote controlled
- Light measurement and motion detection can be deactivated
- Individual adjustment of the parameters with basicDIM DGC Programmer or software masterCONFIGURATOR
- Power supply via basicDIM DGC

Technical data

Ø of detection range, mounted at a height of 2.5 m	4 m
Swivel design	no
Detection angle	360°
Light measurement at the sensor head ^①	10 – 650 lx
Infra-red control range	5 m
Max. mounting height	5 m
Operating temperature	0 +50 °C
Storage temperature	-25 +55 °C
Type of protection	IP20

 $^{^{\}scriptsize \odot}$ The measured value at the sensor head corresponds to approx. 15 to 2,000 lux on the surface measured.



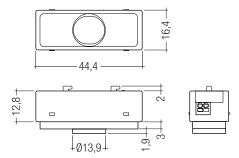

Туре	Article number	Packaging, carton
basicDIM Sensor 5DPI 14f Luminaire installation	28000933	40 pc(s).

SORIES

basicDIM DGC Sensor 5DPI 14rc

Product description


- Light measurement and motion detection
- Up to 4 basicDIM DGC sensors on one basicDIM DGC
- Can be remote controlled
- Light measurement and motion detection can be deactivated
- Individual adjustment of the parameters with basicDIM DGC Programmer or software masterCONFIGURATOR
- Power supply via basicDIM DGC

Technical data

Ø of detection range, mounted at a height of 2.5 m	4 m
Swivel design	no
Detection angle	360°
Light measurement at the sensor head ^①	10 – 650 lx
Infra-red control range	5 m
Max. mounting height	5 m
Operating temperature	0 +50 °C
Storage temperature	-25 +55 °C
Type of protection	IP20

 $^{^{\}odot}$ The measured value at the sensor head corresponds to approx. 15 to 2,000 lux on the surface measured.



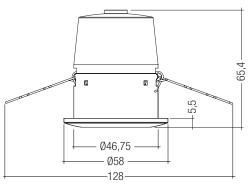

Туре	Article number	Packaging, carton
basicDIM Sensor 5DPI 14rc Ceiling installation	28000934	63 pc(s).

SORIES

basicDIM DGC Programmer

Product description

- Optional infra-red programming unit for basicDIM DGC
- Setting of predefined discrete parameter values
- Programmable functions such as light level, time delay,
 P.I.R., bright-out, power up





Ordering data

Туре	Article number	Dimensions L x W x H	Packaging carton
basicDIM DGC Programmer	28000646	130 x 56 x 15 mm	1 pc(s).

ACCES-SORIES

REMOTECONTROL IR6

Product description

- Optional infra-red remote control
- Switching on and off (On/Off button)
- Dimming (Up/Down button)
- Activation of automatic lighting control
- Setting the threshold control point (Set button)






Туре	Article number	Dimensions L x W x H	Packaging carton
REMOTECONTROL IR6	28000647	86.5 x 40.5 x 7.2 mm	500 pc(s).

ACCES-SORIES

Strain-relief set

Product description

• 5-year guarantee

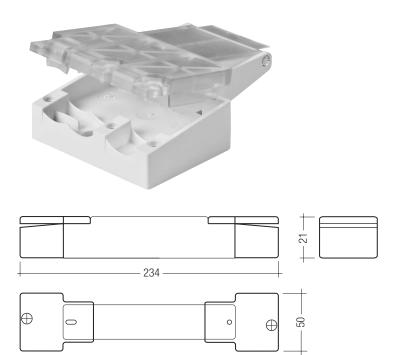

Туре	Article number	Packaging carton
Strain-relief set	28000881	10 pc(s).

basicDIM

basicDIM DGC

The basic DIM DGC provides the basis for an easy-to-use and cost-effective lighting system with motion detection.

When the sensor detects movement it triggers a individual adjustable motion detection profile in the control unit.

As the amount of natural ambient light changes the illuminance from the artificial lighting system is adjusted.

The connected luminaires can be switched on and off via momentary-action switch or remote control possible.

The DALI IN interface allows integration of the basicDIM DGC module also into a comfortDIM system.

The basicDIM DGC module has 5 preprogrammed profiles which can be selected using the basicDIM DGC Programmer.

The profiles can be adjusted to your application via the masterCONFIGURATOR (\geq V2.12) software.

If the basicDIM DGC module is used in the basic application, the CH2 can be used as control channel for controlling subordinate basicDIM DGC modules (basic connection), so that the controlling and the subordinate basicDIM DGC modules can be programmed and allocated to groups using the masterCONFIGURATOR software. Every single basicDIM DGC module can be allocated to a group and respond to the presence of up to 5 groups (for more detailed information please refer to the masterCONFIGURATOR documentation).

Standards

EN 55015 EN 61000-3-2 EN 61347-1 EN 61347-2-11 EN 61547 EN 62386-101 EN 60598-1 EN 62493

Glow-wire test

according to EN 61347-1 passed.

DALI standard

The basicDIM DGC is designed to control control gear with DALI standard IEC 60929 (DALI V0) and IEC 62386 (DALI V1).

Installation




- basicDIM DGC can be operated without sensor.
 The motion detection must be disabled via masterCONFIGURATOR or with unique connecting a sensor and basicDIM DGC Programmer.
- DSI/DALI is not SELV. The installation instructions for mains voltage therefore apply.
- The maximum cable length between the external switch and basicDIM DGC is 100 m.
- The maximum cable length between the sensor and basicDIM DGC is 10 m.
- A synchronous operation of DALI and DSI ballasts at the same control gear is not possible.
- The output channels (for a cable cross-section of 1.5 mm²) must not be exceeded 100 m.
- If CH2 is used as link line, the maximum cable length must not exceed 100 m (at 1.5 mm²).
- If a basicDIM DGC is connected to CH2, DALI IN is disabled and CH2 is used as Link-Line (neighbourhood function). No control commands are transmitted via CH2, to reactivate DALI IN see basicDIM DGC manual.

- Any number of push to make switches may be connected in parallel to the inputs.
- Do not connect standard switches to the input.
- Please ensure that the detection range of the sensor lies in the lighting area of the controlled luminaires.
- Heaters, fans, printers and copiers located in the detection zone may cause incorrect presence detection.
- To avoid false readings, the sensor should be installed so there is no direct light from the lamp in the detection zone.
- Sensor wires must be routed separately from the lamp wires and mains cables otherwise the lighting control system may malfunction.
 If separate routing is not possible (for reasons of space) shielded lamp wires and mains cables must be used.


basicDIM DGC sensor

Light level recognition area

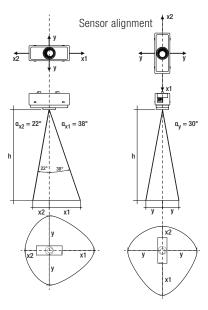

h *	x1	x2	у	d
1.7 m	1.3 m	0.7 m	1.0 m	2.8 m
2.0 m	1.6 m	0.8 m	1.2 m	3.2 m
2.3 m	1.8 m	0.9 m	1.3 m	3.7 m
2.5 m	2.0 m	1.0 m	1.4 m	4.0 m
2.7 m	2.1 m	1.1 m	1.6 m	4.4 m
3.0 m	2.3 m	1.2 m	1.7 m	4.9 m
3.5 m	2.7 m	1.4 m	2.0 m	5.7 m
4.0 m	3.1 m	1.6 m	2.3 m	6.5 m

Example for light and motion detection area at height of 1.7 m:

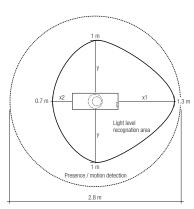

 The recommended maximum room height for office applications is 3 m and for corridor applications for example 4 m.
 Up to 2 m mounting height presence is detected and over 2 m motion is detected.

Calculation of the diameter (light area):

 $x1 = tan(\alpha_{\chi 1}) \times h$


 $\text{x2} = \text{tan}(\alpha_{\text{X2}}) \times \text{h}$

 $y = tan(\alpha_y) \times h$

Calculation of the diameter (motion area):


 $d = 2 \times tan(0.5 \times \alpha) \times h$


Presence / motion detection

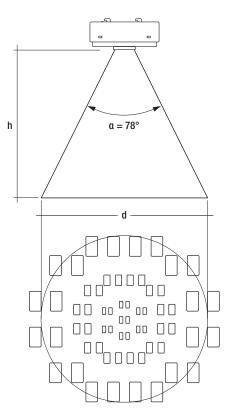


Mounting variants luminair installation sensor


Size of the sheet: $0.8 - 1.8 \, \text{mm}$

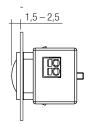

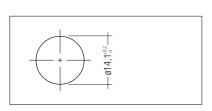



Size of the sheet: $0.8 - 3.0 \, \text{mm}$

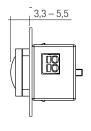

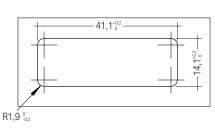

Size of the sheet: $0.6-0.8\,\text{mm}$

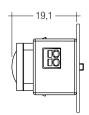

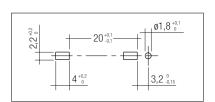


Wiring diagram basicDIM DGC

DA 2 ± 3 ≂ 4 ≂ TALEX(converter max. 10 basicDIM DGC Sensor 2 ± 3 ≂ 4 ≂ TALEX(converter 3 ≂ 4 ≂ TALEX(converter DA LCAI 6 DA DA max. 500 W (L') max. 4 max. 10 Sensor eD1 2 ± 3 ≂ 4 ≂ TALEX(converter basicDIM DGC CH1 D1 D2 LCAI 6 DA 7 DA CH2 D1 D2

 * must be the same phase as for L

Relais in standby

max. 64 DGC

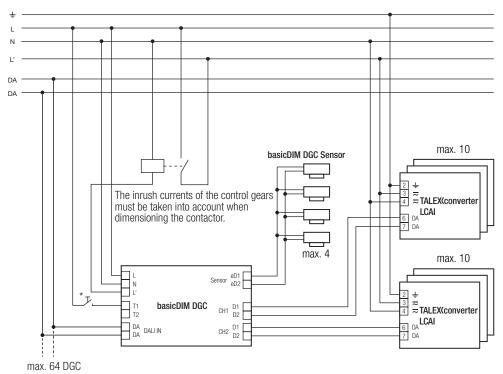


* must be the same phase as for L

basicDIM


Wiring type and cross-sections for basicDIM DGC

Solid wire with a cable cross-section of 0.5 mm² to 1.5 mm².

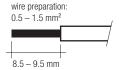


Wiring type and cross section basicDIM Sensor 5DPI 14rc

The wiring can be solid wire or stranded wire with a cross-section of 0.2 mm² to 1.5 mm².

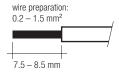

Wiring type and cross section basicDIM Sensor 5DPI 14f

The wiring can be solid wire or stranded wire with a cross-section of $0.2\ mm^2$ to $0.5\ mm^2$.

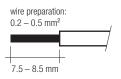

DALI IN

The DALI IN interface allows integration of the basicDIM DGC module also into a comfortDIM or other BMS systems.

However, not all DALI commands are supported. The DALI commands supported are listed in the operating instructions.



By using the DGC in basic configuration (additional DGC's connected to CH2) DALI IN interface will be deactivated.

DALI/DSI output channels CH1 - CH2

The output channels can be set to DSI or DALI (default) using the basicDIM DGC Programmer or the masterCONFIGURATOR software.



After mains failure the basicDIM DGC will set new the following parameters to CH1/CH2:

POWER ON LEVEL SYSTEM FAILURE LEVEL FADE TIME MIN LEVEL MAX LEVEL

For more detailed information please refer to the manual.

Switch

basicDIM DGC has two inputs (T1 and T2) for two external switches. Any number of switches can be connected in parallel to the inputs (parallel connection of T1 and T2 possible).

Short press (< 500 ms):	ON/OFF
Long press (> 500 ms):	Dim up/down A change in the light value deactivates lighting regulation only temporarily. As soon as the luminaire has been automatically switched on again (motion detection) or manually switched off and on again, regulation is activated again.
2 x short press:	The overwritten setpoint light value is stored (luminaire acknowledges by flashing twice) Function is lockable via the DSI programmer

Different output channels are controlled, depending on the profile selected.

Relais



The relay can be used in four different operating modes:

- Reduction of standby losses (standby wiring example)
- Independent output channel for switching non-dimmable luminaires (DALI wiring example)

Depending on the profile used, the relay will respond differently. For the 5 main profiles, the two relay profiles used are Standby and OnlyOFF. The masterCONFIGURATOR software allows to enable or disable the relay profiles as well.

Standby	Standby	Energy saving mode If the basicDIM DGC module is switched off, the relay will switch off (after 10 minutes). If the basicDIM DGC is switched on, the relay will switch on. Switching: relay in standby mode
OnlyOFF	Only OFF	The relay must be switched on using the momentary-action switch, but is switched off by the presence detector.
Active		The relay is switched on or off via the presence detector.
Inactive		The relay must be switched on and off using the momentary-action switch.

Depending on the profile used, different operating modes are preprogrammed for the presence detector. These can be changed using the basicDIM DGC Programmer or the masterCONFIGURATOR software.

ON	ON / OFF	The light is switched on and off automatically based on the presence/absence of people.
only OFF	Only OFF	The presence detector just switches the connected luminaires off. The luminaires are switched on manually via the connected external momentary-action switch or the remote control.
₩	Never OFF	If no presence is detected, the sensor dims down to the "second light level" parameter and maintains this setting.
OFF	OFF	Presence detector disabled. The light must be switched on and off manually.

Run-on time









Run-on time of the presence detector, run-on time starts when no presence is detected.

The run-on time may vary depending on the profile used.

You can choose whether you want the basicDIM DGC module to switch off the light completely or to dim it down to the absence value after the run-on time. It can also be changed using the basicDIM DGC Programmer or the masterCONFIGURATOR software.

Absence value







Switch-off delay










The absence value (light level) and the switch-off delay (the period for which the level is maintained) differ depending on the profile used; these parameters may be changed using the basicDIM DGC Programmer or the masterCONFIGURATOR software.

Offset





Depending on the profile used, a negative offset may be enabled between CH2 and CH1. Using the basicDIM DGC Programmer and the masterCONFIGURATOR software, this parameter may be changed (also positive offset possible).

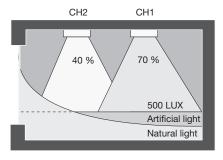

Manual-off delay





If the light is switched off manually via momentary-action switch or remote control, the presence detector is disabled. After a period of delay without any presence detected, the presence detector is enabled again. If the sensor detects presence during the "Manual Off" delay, the delay time will start all over again.

Lighting control



Lighting control is started via the Auto key of the basicDIM Programmer or REMOTECONTROL IR6.



If the basicDIM DGC module has been switched on via the ON key, lighting control is disabled.

If you want to use lighting control, you need to start the DGC module via the Auto key.

Lighting control can also be disabled using the masterCONFIGURATOR software.

Set target value



The light level can be set via following options:

- REMOTECONTROL IR6 (press the key for > 3 s)
- basicDIM DGC Programmer (press the key for > 3 s)
- masterCONFIGURATOR software
- external momentary-action switch:



By briefly pressing the momentary-action switch twice the currently measured light level is saved as new target value.

(Depending on the profile used, this function is enabled or disabled, but it can be changed using the basicDIM DGC Programmer or the masterCONFIGURATOR software)

Bright-out



If the nominal illuminance level (e.g. 500 lx) is exceeded for 10 minutes at over 150 % (e.g. 750 lx), the light is switched off, even if presence is detected. The light is switched on again as soon as the measured light level falls below the target value.

Depending on the profile used, this function is either enabled or disabled and can be changed using the basicDIM DGC Programmer or the masterCONFIGURATOR software.

The bright-OUT status can be indicated on the sensor by a slowly flashing green status LED.

By default this function is disabled, but it can be enabled using the masterCONFIGURATOR software.



Light control incl. brightout activated for CH1. CH2 is not illuminated controlled.

basicDIM

Neighbourhood function

Depending on the profile used, the basicDIM DGC can respond to presence detected in other groups.

These functions can be changed using the basicDIM DGC Programmer or the masterCONFIGURATOR software.

Î Î Î	Switched off	No response to presence detected in other groups. Default setting for all profiles!
n on	Switched on	If presence is reported by other groups, the light level will switch to presence value
† †	Switched on	If presence is reported by other groups, the light level will switch to absence value

Behaviour after return of power

The basicDIM DGC module features two different types of starting behaviour after mains failure.

OFF	Power ON behaviour OFF (luminaires remain switched off)
ON ON	Power ON behaviour ON (the luminaires are switched on after return of power). Default setting for all profiles!

Momentary-action switch inputs

M	Momentary-action switch 1
T2	Momentary-action switch 2
CHI CH2	Display of outputs controlled by momentary- action switch (CH1 and CH2, or just CH1 or CH2)

Basic functions

ON	Switching on If the DGC module has been switched on via ON, lighting control is disabled.
OFF	Switching off
O	Dimming up
•	Dimming down

Profiles

Profile 1: Individual room Profile 2: Classroom Profile 3: Corridor Profile 4: WC

Profile 5: Free-standing luminaire (default profile)

Profile Test:



You may use the Profile Test to check the profile you selected.

All times relevant to the profile are reduced to 15 s.

The Profile Test will automatically be terminated after 1 h, or by pressing the Auto key of the basicDIM DGC Programmer.

The profiles can be adjusted to your needs via the masterCONFIGURATOR software or the DGC Programmer. For more detailed information please refer to the masterCONFIGURATOR documentation at www.tridonic.com.

Brief description of profiles


Individual room profile





Classroom profile



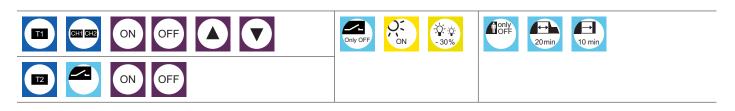

Corridor profile





WC profile





Free-standing luminaire profile (default)



